

アルミビスセット EX-RR/EX-2/LDT/NEXT

Ver.1.00.

この度はアルミビスセットをご購入頂きまして誠に有り難うございます。締め付けの際に力を入れすぎると破損する恐れがありますので、ビスの先端に少量のグリスを塗布して取付けて下さい。

マスターユニット

- ① M2.6 -24 -----  x 5 : ケース / ロックレバー
- ② M2.6 -14 -----  x 1 : ケース


グリップユニット

- ③ M2 -6 -----  x 1 : グリップケース
- ④ M2.6 -8 -----  x 4 : グリップケース
- ⑤ M2.6 -16 -----  x 4 : グリップケース
- ⑥ M2.6 -22 -----  x 2 : スロットルユニット
- ⑦ M2.6 -5 丸皿 -----  x 4 : グリッププレート
- ⑧ M2.6 -8 丸皿 -----  x 4 : グリッププレート (ラージ)
- ⑨ M2 -6 キャップ -----  x 2 : トリガー
- ⑩ M2 ナット -----  x 2 : トリガー

エキスパートグリップ LDT には
③④⑤⑧のみ使用します。



< 交換前に数をお確かめ下さい >

マスターユニット

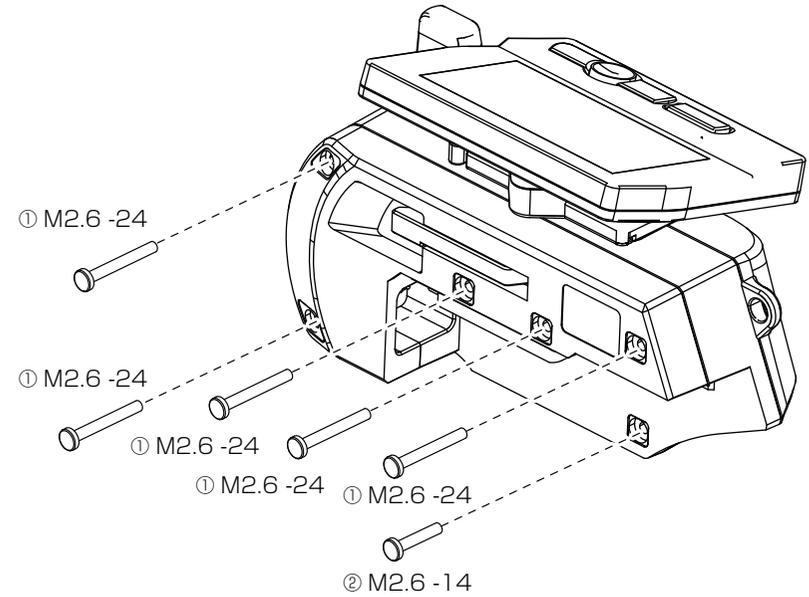

グリップユニット


エキスパートグリップ LDT には
③④⑤⑧のみ使用します。

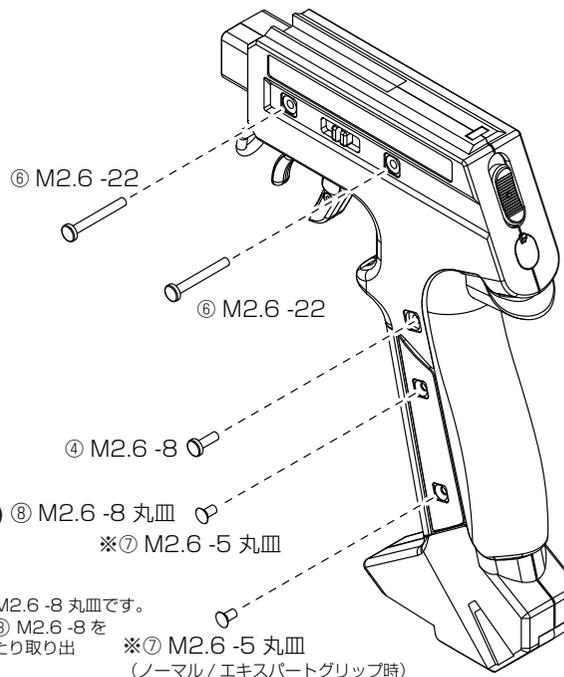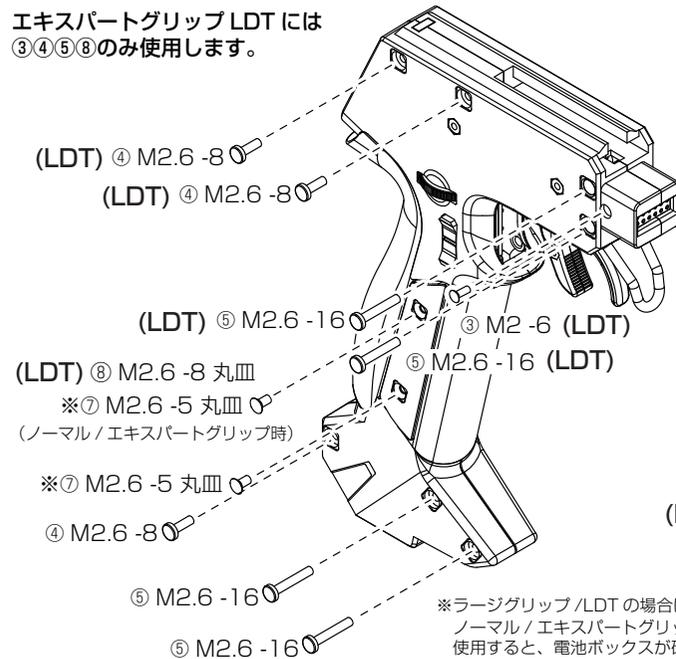

※ラージグリップ / LDT の場合は、⑧ M2.6 -8 丸皿です。
ノーマル / エキスパートグリップに⑧ M2.6 -8 を
使用すると、電池ボックスが破損したり取り出
せなくなる恐れがあります。

※⑦ M2.6 -5 丸皿
(ノーマル / エキスパートグリップ時)

トリガー

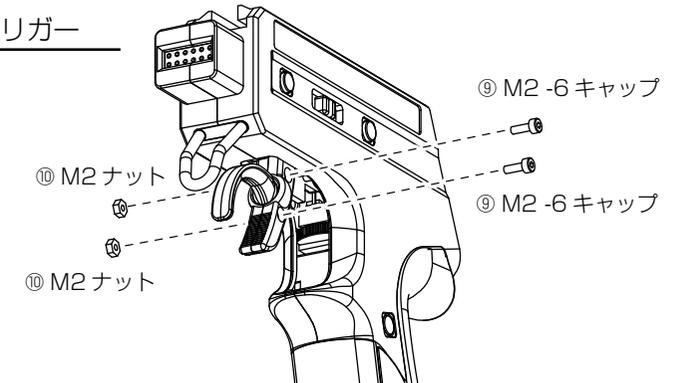

◆ お問い合わせ ◆
最新情報はホームページに掲載中!
www.koproco.co.jp

近藤科学株式会社 サービス部
〒116-0014 東京都荒川区東日暮里 4-17-7

☎ 03-3807-7648
受付時間：月曜日～金曜日（祝祭日を除く）
9：00～12：00、13：00～17：00

Aluminum Screw Set EX-RR/EX-2/LDT/NEXT

Ver.1.00.

Thank you for using our products. Be careful when tightening the screws so that you do not damage the threads. Please apply a small amount of grease to the screws when installing or there is a chance of the screw breaking when it is over-tightened.

Master Unit

① M2.6 -24 ----- ○ x 5 : Case/Lock lever

② M2.6 -14 ----- ○ x 1 : Case

Grip Unit

③ M2 -6 ----- ○ x 1 : Grip Case

④ M2.6 -8 ----- ○ x 4 : Grip Case

⑤ M2.6 -16 ----- ○ x 4 : Grip Case

⑥ M2.6 -22 ----- ○ x 2 : Throttle Unit

⑦ M2.6 -5 ----- ○ x 4 : Grip Plate

Please only use ③④⑤⑧ for Expert Grip LDT.

Oval head (machine) Cap screw

⑧ M2.6 -8 ----- ○ x 4 : Grip Plate (large)


Oval head (machine) Cap screw

⑨ M2 -6 Cap Screw --- ○ x 2 : Trigger



⑩ M2 ----- ○ x 2 : Trigger
hexagon head bolt

< Please check >

Master Unit

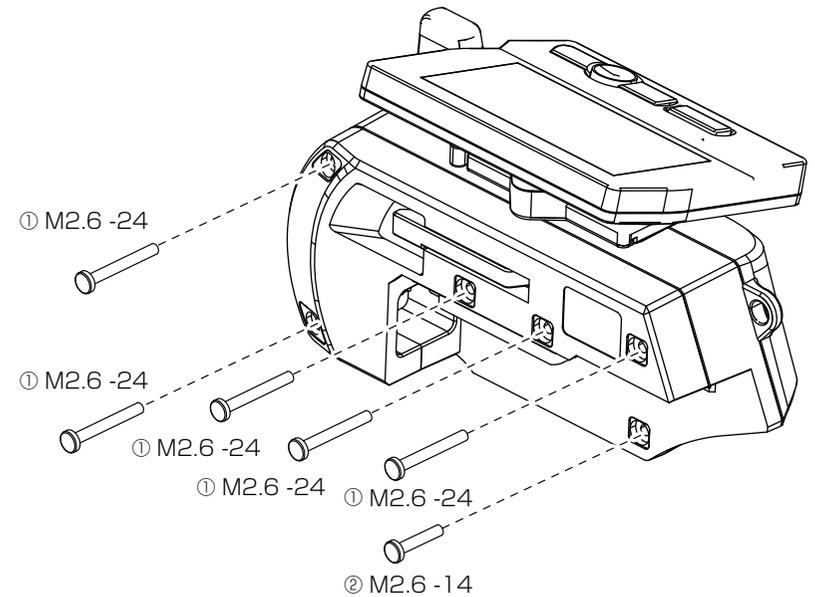


Grip Unit

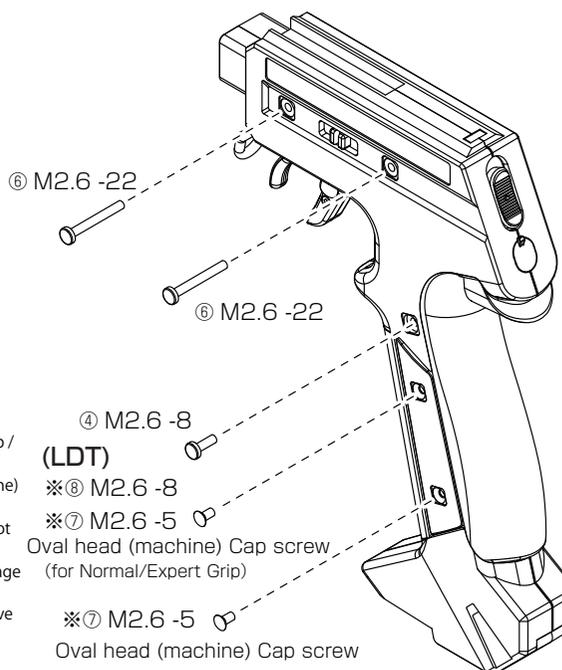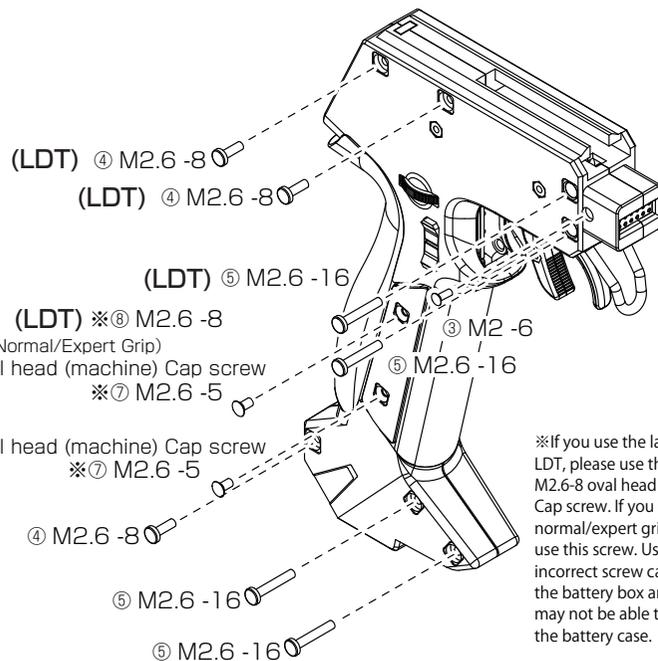

※If you use the large grip / LDT, please use the ⑧ M2.6-8 oval head (machine) Cap screw. If you use normal/expert grip, do not use this screw. Using the incorrect screw can damage the battery box and you may not be able to remove the battery case.

④ M2.6 -8
(LDT) ※⑧ M2.6 -8
※⑦ M2.6 -5
Oval head (machine) Cap screw (for Normal/Expert Grip)
⑦ M2.6 -5
Oval head (machine) Cap screw

Trigger

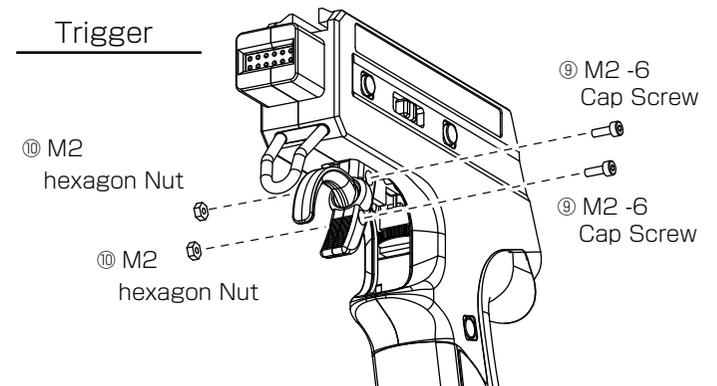

⑨ M2 -6 Cap Screw
⑩ M2 hexagon Nut
⑨ M2 -6 Cap Screw
⑩ M2 hexagon Nut

Latest information can be accessed here. >> <http://www.kopropro.co.jp>

KONDO KAGAKU CO.,LTD

ADDRESS : 4-17-7 Higashi-Nippori, Arakawa-ku Tokyo Japan 116-0014 Japan
Service department

TEL : +81-3-3807-7648 (service)

Hours of operation: 9:00-12:00 & 13:00-17:00 M-F except national holidays Saturday and Sunday closed